
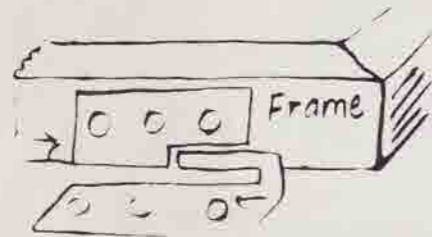


PRINT YOUR OWN POSTER

FRAME.. 2 lengths of hard wood 24"x2" + 2 lengths 38"x2"


MESH.. Organdie, terylene. Organdie can be bought from any department store. Cut piece 2" larger than frame stretch tightly; this needs two people, one to staple one to pull mesh

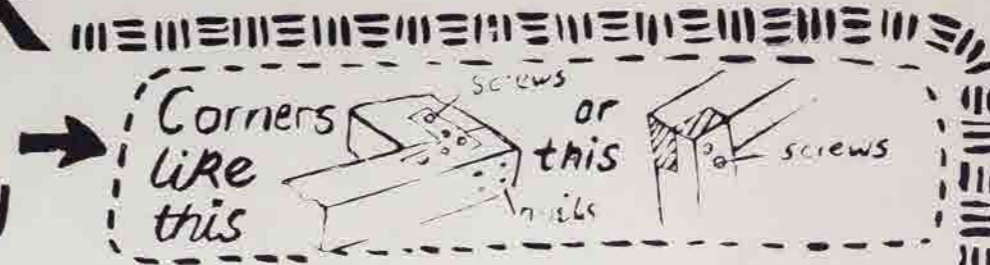

attach to base board or table with lift off hinges. Stick brown tape along inside angle made by mesh and frame. This stops the ink from seeping through as well as determining size of print.



SQUEEGEE..

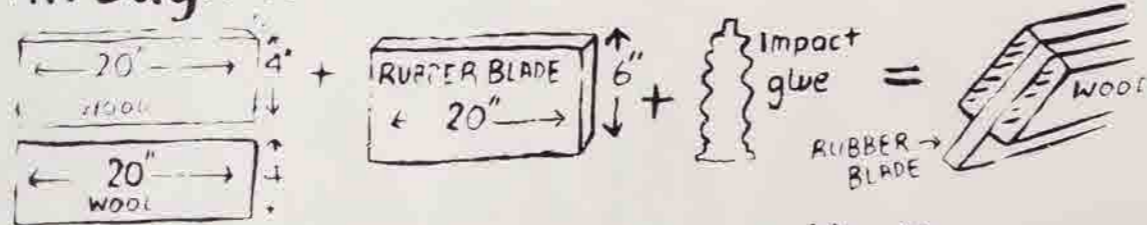

STENCIL.. newspaper or other thin paper to fit the frame work out wording & design. cut out with sharp blade

Aim for blocks rather than lines NOTE ATTACHED MIDDLES not

GET READY: Inks - oil based thinned with white spirit to thickness of pouring custard. Rags, newspapers, masking tape, jam jar, knife for mixing ink.

Hinge frame to base board; place stencil on clean paper. lower screen. pour ink along top end. pull squeegee across screen with strong even pressure - this will stick the stencil to the screen & produce the first print. Hang up to dry.


when finished clean immediately with white spirit + polyclens.

EXPERIMENT.. try wallpaper paste mixed with powder colour, drawing with wax crayon (remove with white spirit), drawing with nail varnish remove with varnish remover.



Suppliers of screen materials. George Hall Hardman St Shawheath, Cheshire. SERICOL 24 Parsons Grn lane SW6

look up screen process printers in phone directory they will sometimes give away end of run inks. phone us for advice + information 01-267-2309 01-720-4746

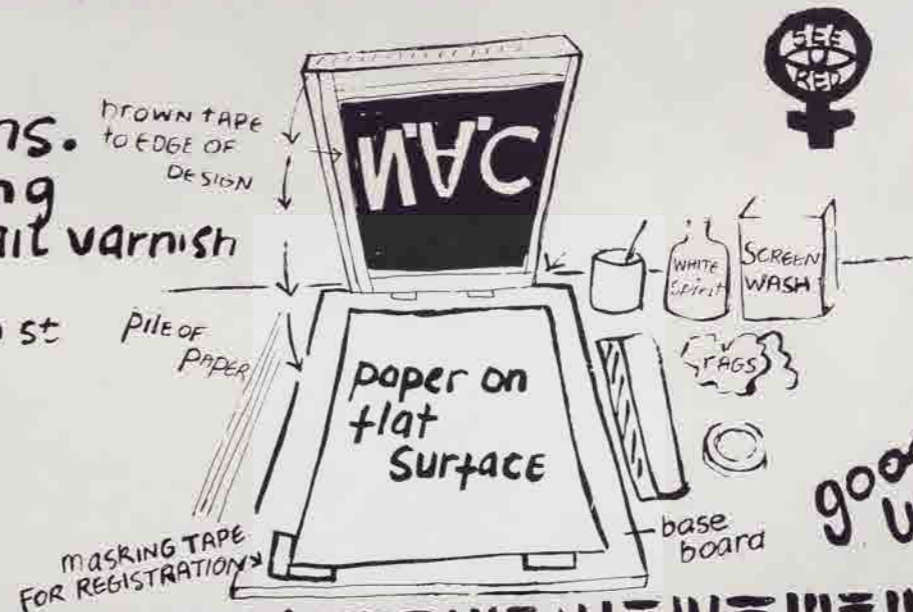

Faint, illegible text covering the majority of the page, possibly bleed-through from the reverse side.